



ADDRESSES OF SENSORS

NO. OF NO. 1	PORTABLE FEELERS	PORTABLE FEELERS - FORWARD FEELERS	AIR INLET
1C	0102 0103 0104 0105 0106 0107	0101	0110
1A	0202 0205 0203 0204 0206 0207	0201	0210
1B	0302 0303 0304 0305 0306	0301	0310
1C	0402 0403 0404 0405	0401	0410
1D	0502 0503 0504 0505 0506	0501	0510
2A	0602 0603 0604 0605 0606 0607	0601	0610
2B	0702 0703 0704 0705 0706 0707	0701	0710
2C	0802 0803 0804 0805 0806 0807	0801	0810
2D	0902 0903 0904 0905 0906 0907	0901	0910
3A	1002 1003 1004 1005 1006 1007	1001	1010
3B	1102 1103 1104 1105 1106 1107	1101	1110
3C	1202 1203 1204 1205 1206 1207	1201	1210
4A	1302 1303 1304 1305 1306 1307	1301	1310
4B	1402 1403 1404 1405 1406 1407	1401	1410
4C	1502 1503 1504 1505 1506 1507	1501	1510

SYMBOLS:
 ● Portable feelers.
 ■ Humidity feelers.

APPARATUS OF RESISTANCE THERMOMETERS
AND HUMIDITY DETECTORS IN CARGO HOLDS

Ub Polaris